

NEW TECHS


SUPPLIES:

- 1 ROLL CAMPING FOAM
- 1 ROLL OF ~~SEE~~ LIGHTWEIGHT STRIPPING TAPE
- 1 CAN OF ALL PURPOSE SPRAY ADHESIVE
- 1 ROLL OF BASEBALL GRIP TAPE
- 1 ROLL OF ELECTRICAL TAPE
- 1 PAIR OF KNEE HIGH SIZE 14 DRESS SOCKS
- 1 GRAPHITE GOLF CLUB CORE OR KITESPQR
- 1 ROLL DOCTAPE
- 1 YARD STICK
- 1 RAZOR KNIFE
- 1 MARKER
- 1 SPEED SQUARE

STEP 1

- 1) LETS CHOOSE YOUR CORE. HAS 2 29 INCH BODIES
- 2) YOU WILL NEED TO CUT 2 TO 3 1/2 INCH WIDE STRIPS 8 INCHES LONG.


- 2) PULL 5 PEICES OF STRIPPING TAPE APPROXIMATELY 6 INCHES LONG AND HAVE IN EASY REACH OF THE PROJECT AS SHOWN DIAGRAM A;

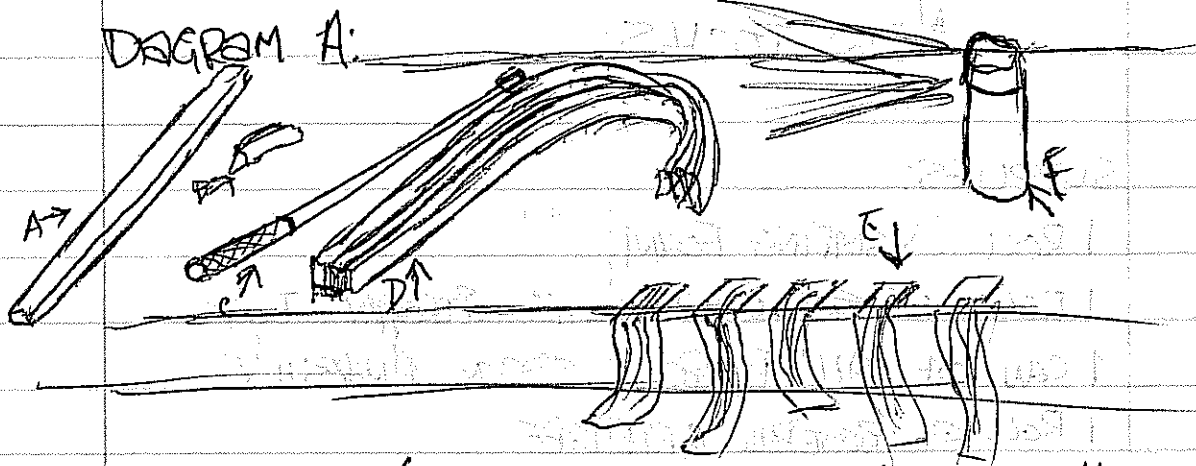

- A). YARDSTICK/STRAIGHTEDGE D). 3 1/2" PEICES 58" LONG
 B). RAZOR KNIFE E). STRIPPING TAPE
 C). GOLF CLUB F). SPRAY ADHESIVE


II) FIRST CUT THE CORE WITH TAPE TO PROTECT THE STAB TIP.

DIAGRAM B.

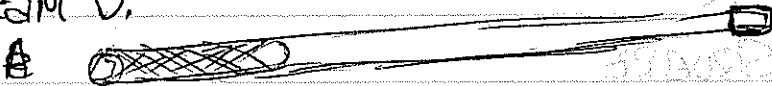


B). THEN USING SPRAY ADHESIVE, SPRAY BOTH THE CORE AND TOP OF THE FOAM STRIPS LET SET FOR 35 SECS. THEN PLACE LIKE AN EDGE ON THE CORE, STARTING WITH THE TIP FIRST AND USING TAPE TO SECURE FOAM IN PLACE.

DIAGRAM C:

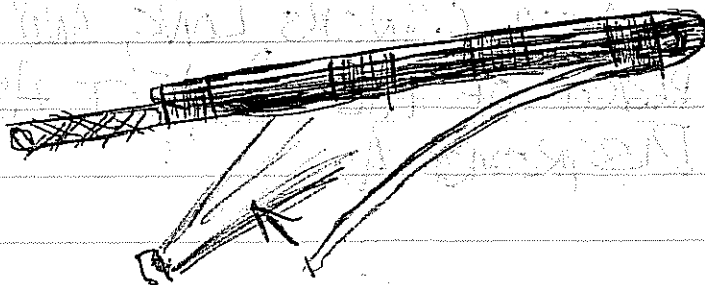

FOLLOW THIS METHOD UNTIL THE BLADE REACHES THE DESIRED WIDTH.

III NOW CUT TWO MORE PIECES OF FOAM $\frac{3}{4}$ " SHORT OF WIDTH FOR THE SIDES; AND SPLIT THE DIFFERENCE. THE CORE OF THE BLADE SHOULD SEEM AS 2 BLADE. GLUE BOTH SIDES ONCE AGAIN AND PLACE ON SIDE OF BLADE. THEN USE TAPE TO RETAIN THE MOULD ON YOUR TABLE

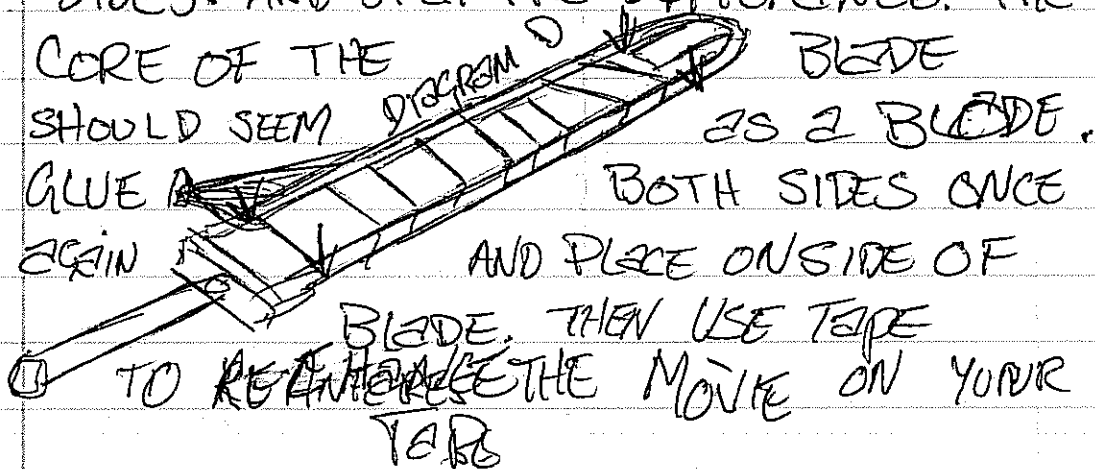

WATER ~~TO~~ NO WATER

III USE SOCK AND TAPE TO HOLD ~~DOWN~~ ~~GLUED~~ ~~FOAM~~ TO CORE THEN WRAP BLADE IN PECKING TAPE AND SOCK TO FINISH THE BLADE

